


HSB SERIES SPARE PARTS

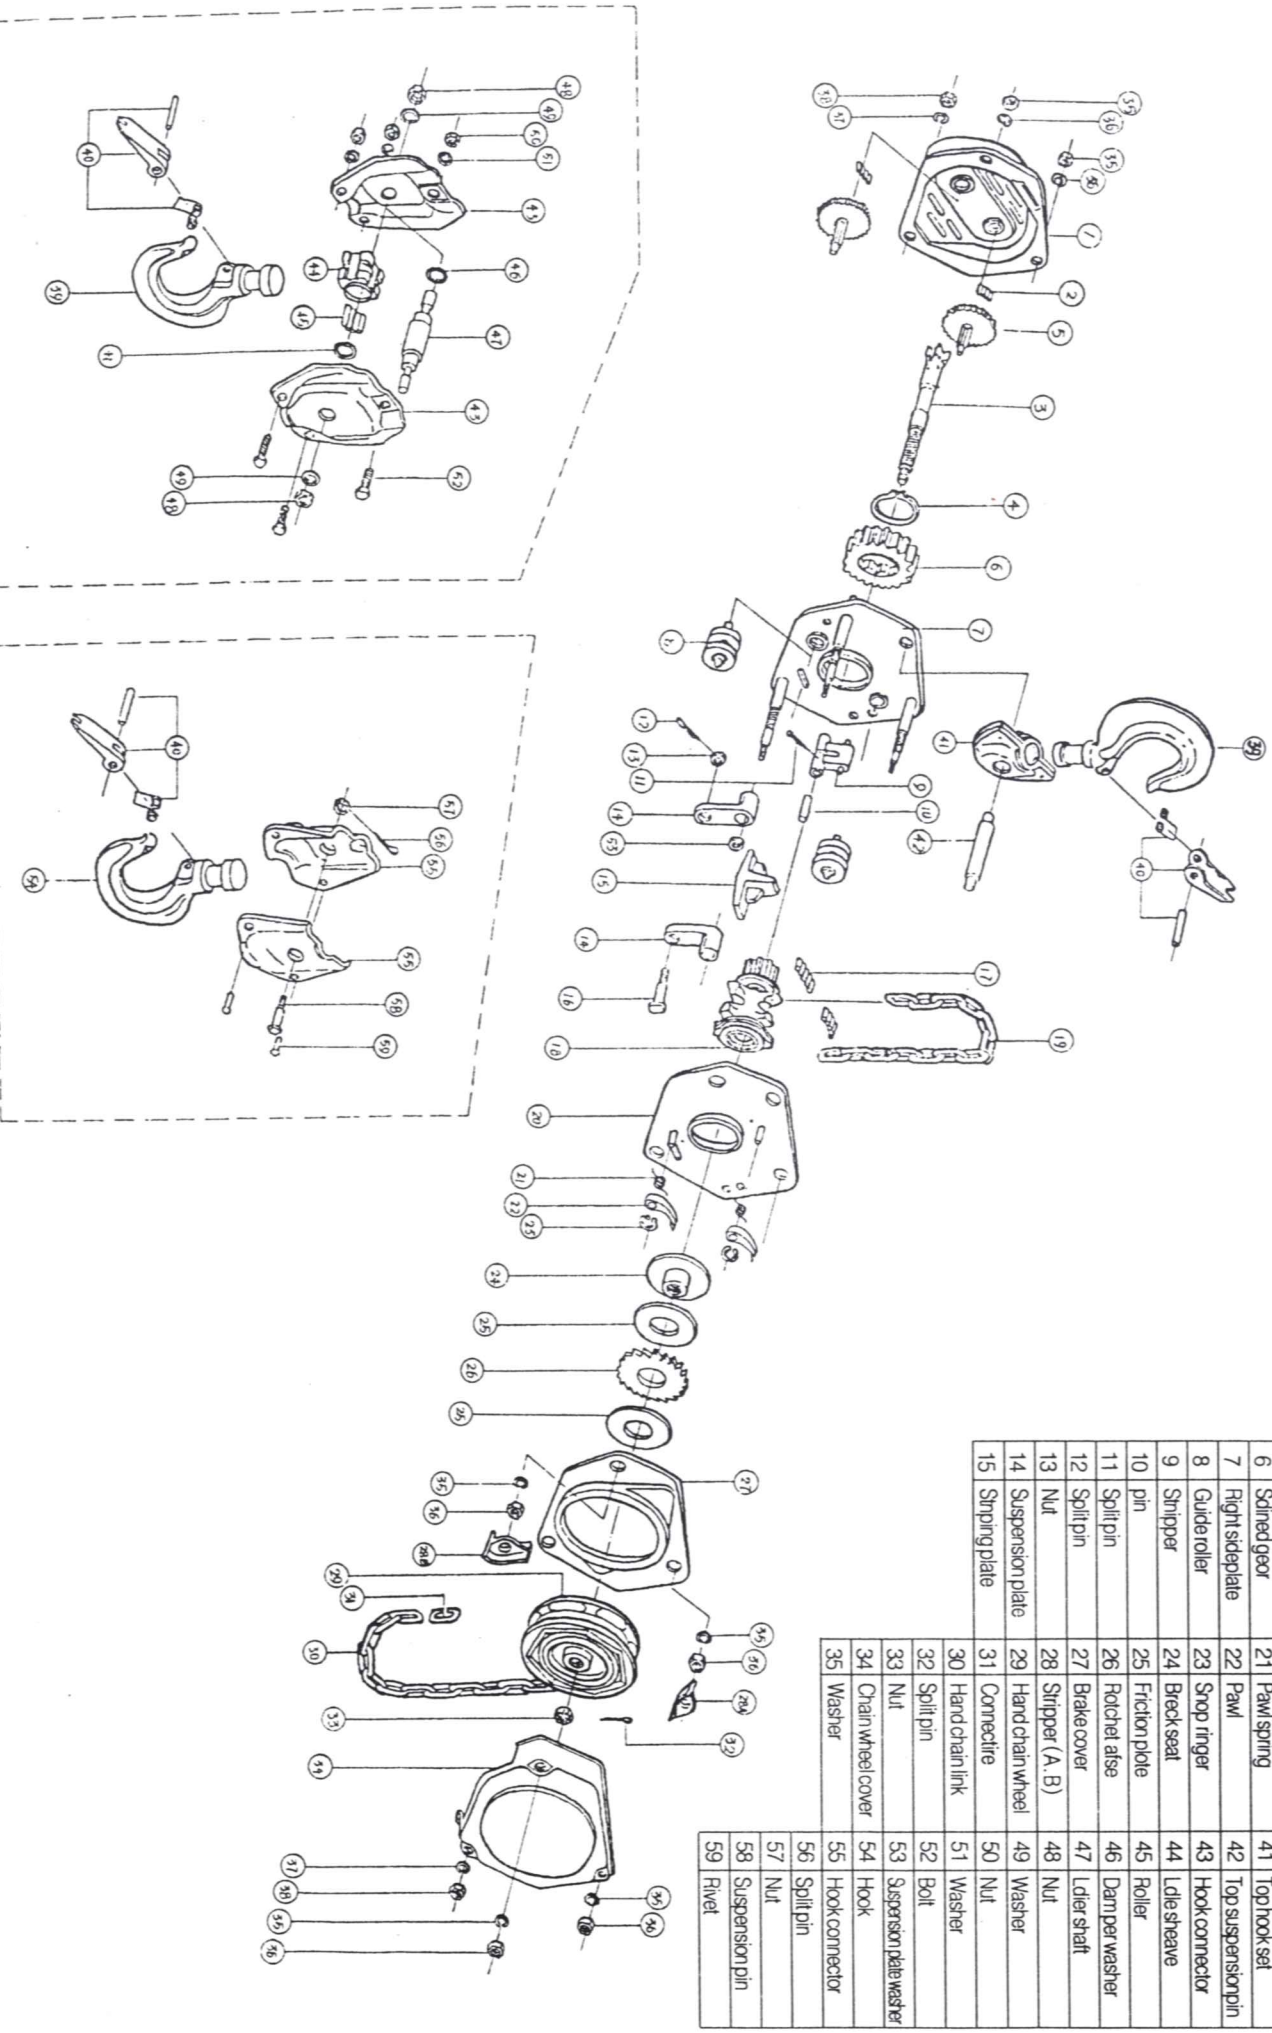

1	Sheet cover	16	Suspension pin	36	Nut
2	Roller	17	Roller	37	Washer
3	Disc gear	18	Load chain sprocket	38	Nut
4	Input shaft	19	Load chain	39	Hook
5	Snapping	20	Left side plate	40	Latch clamp
6	Spined gear	21	Pawl spring	41	Top hook set
7	Right side plate	22	Pawl	42	Top suspension pin
8	Guide roller	23	Snop fringer	43	Hook connector
9	Stripper	24	Breck seat	44	Idle streave
10	pin	25	Friction pole	45	Roller
11	Spill pin	26	Rotchel atse	46	Damper washer
12	Spill pin	27	Brake cover	47	Lder shaft
13	Nut	28	Stripper (A, B)	48	Nut
14	Suspension plate	29	Hand chain wheel	49	Washer
15	Shping plate	30	Connectre	50	Nut
		31	Hand chain link	51	Washer
		32	Spill pin	52	Boil
		33	Nut	53	Suspension plate washer
		34	Chain wheel cover	54	Hook
		35	Washer	55	Hook connector
				56	Spill pin
				57	Nut
				58	Suspension pin
				59	Rivet